

Vehicle-Specific Power Tailgate Lift System

Honda CR-V

2017-2022

Part no. ARHCRV17



Points to Note

- For safety and to ensure proper product use, we recommend professional installation. Do not attempt to disassemble or install the system yourself, as this may result in product damage or personal injury.
- Route each wire harness according to the instructions in this manual, securing them to the vehicle's factory harnesses with cable ties. Ensure the wiring is kept clear of fasteners and screw holes to prevent the harnesses from being crushed or pinched by trim panel clips and screws during reassembly.
- Some wire harness terminals (indicated by the red ellipses below) are left disconnected during manufacturing. Please insert these terminals into their corresponding connectors before routing the harnesses to prevent short circuits. Once routed, connect the remaining harness plugs (indicated by the blue ellipses) to the vehicle's factory plugs.



- Before beginning installation, inspect the vehicle's instrument panel display, verify that all buttons, doors, and windows operate correctly, and check for any pre-existing scratches on the interior or exterior. Report any issues to the customer immediately.

Installation Precautions

- Remove any metal accessories or hard objects from your person during installation to prevent damaging the vehicle's paint, seats, or interior. Carefully store all removed trim components in a safe location to avoid scratches.
- The illustrations in this manual are for reference only. While specific vehicle configurations may vary slightly from the pictures, the general installation methods remain the same.

In the Box

1		Strut	Qty 2
2		Tailgate ECU	Qty 1 set
3		Wire harness	Qty 1 set
4		Power latch	Qty 1
5		Tailgate switch	Qty 1

Other Accessories

Screws, brackets


Recommended Tools




Threading tools



Quick release
ratchet wrench set

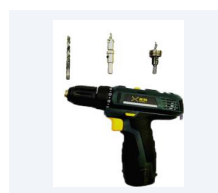

Electric drill and
drill bits

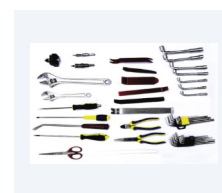

Other tools

Notice

This vehicle-specific kit converts the manual tailgate on the vehicle listed in this manual to power operation. Installation requires a good level of technical knowledge. Please read this manual in its entirety before you start.

Use the correct tools during installation to prevent damage to the vehicle or the product. Please note that we cannot be held liable for any issues arising from improper installation.

Before starting the installation, disconnect the negative battery terminal and make sure the ignition is off and the key is removed or kept away from the vehicle.

Installation



- 1 Remove the indicated driver side trim panels and door sill panel.




- 2 Remove the rear right side door sill panel and B-pillar trim panel.




- 3 Take out the boot floor mat and remove the trim panel on the right side of the boot.



- 4 Remove tailgate trim panels.

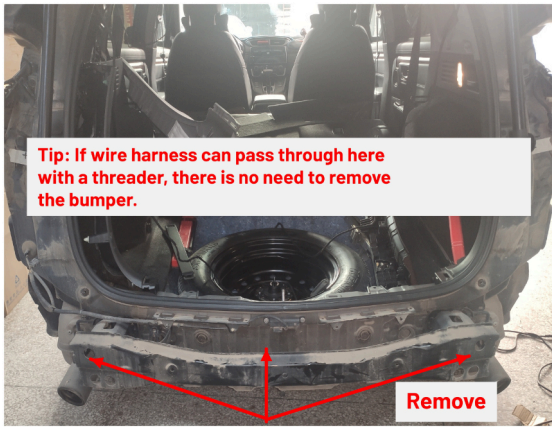


- 5 Remove the bumper (if the wire harness can pass through here with a threader, there is no need to remove the bumper).

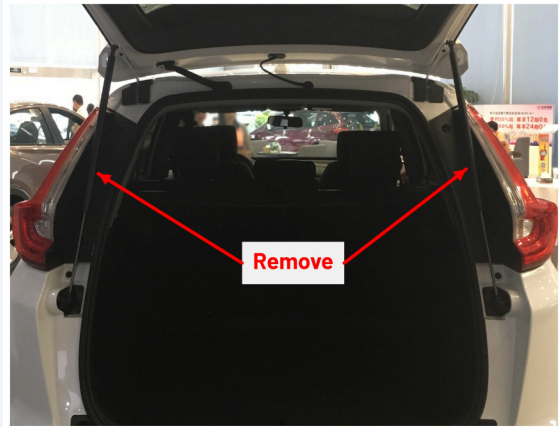

- 6 Remove the gas struts. To do this safely, remove and replace one strut at a time.




- 7 Install the electric struts (L for the left side, R for the right side, as indicated by the first letter of the strut code), making sure the ends with wire harnesses face the car body.

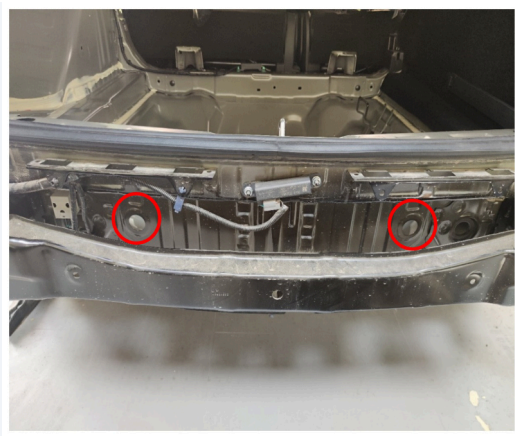


- 8 Thread the wire harnesses through the holes in the bumper.




- 9 If removing the bumper is not necessary, thread the strut wire harness through here into the bumper.

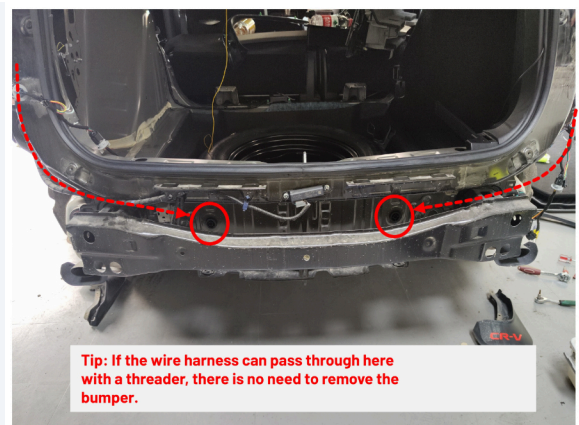

- 10 Remove the plugs from the holes and thread the strut wire harnesses through the holes into the car body.

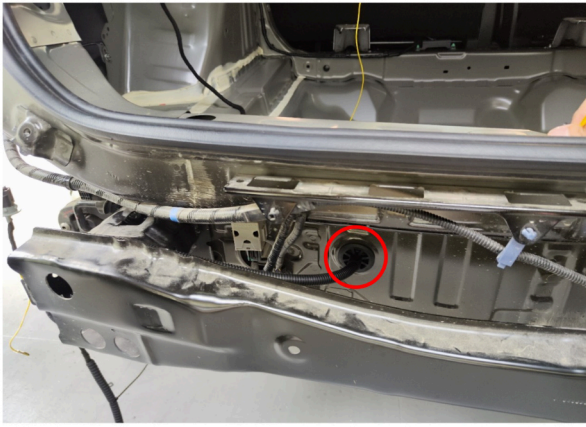


- 11 Reconnect the left and right plugs.

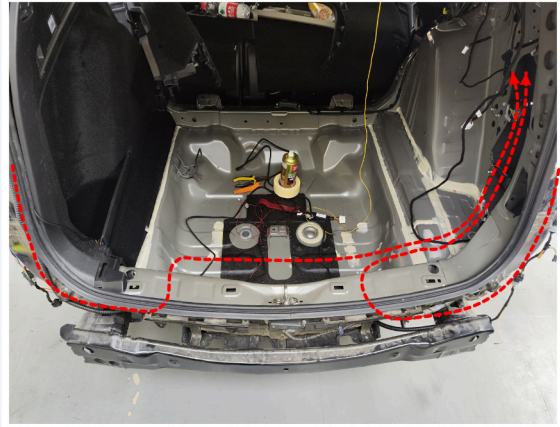


- 12 Route the strut wire harnesses to the right side of the boot.




- 13 Remove the factory latch and install the power latch.

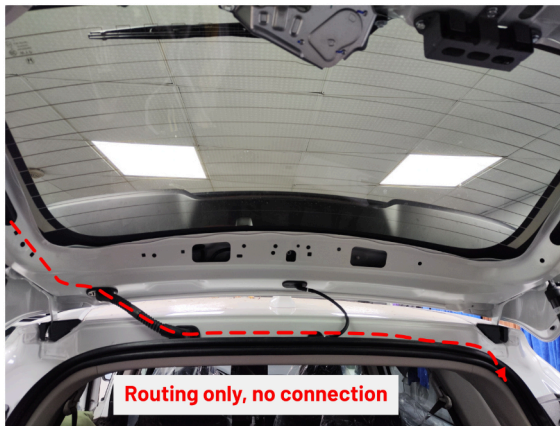

- 14 Route the lock signal harness to the right side of the boot.

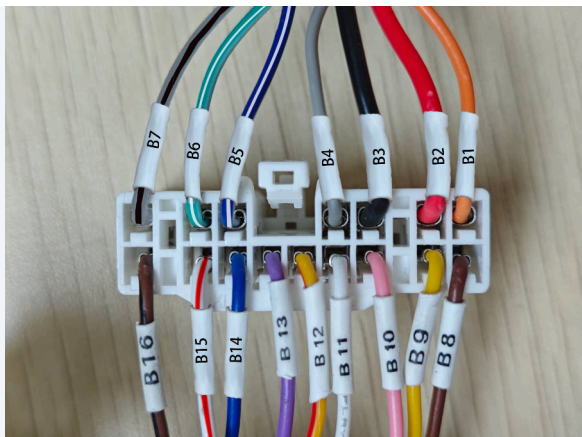

- 15 Insert the lock signal harness terminals into the wire harness connector.

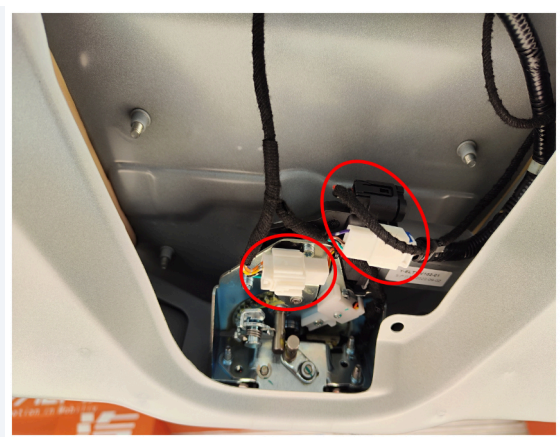

- 16 Connect the connectors of the lock signal harness to the power latch.




- 17 Connect the connectors of the lock signal harness to the new tailgate switch.



- 18 Connect the connector of the lock signal harness to the tailgate handle switch.



- 19 Route the power harness.

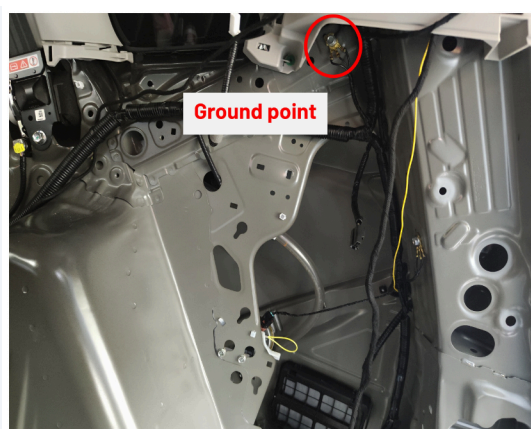

- 20 Connect the ground wire to the factory grounding point at the indicated location.




- 21 Connect the power harness to the indicated connectors at the B-pillar.



- 22 Remove the blank button and install the front switch.




- 23 Connect the connectors to the front switch and the indicated button behind the panel.

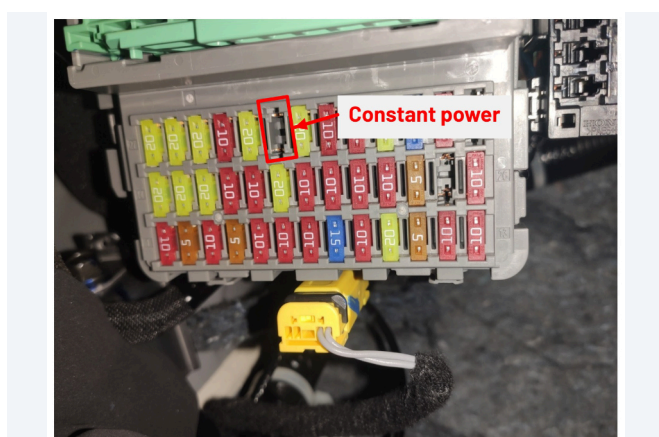


- 25 The constant power location.


- 24 Check all the connectors.

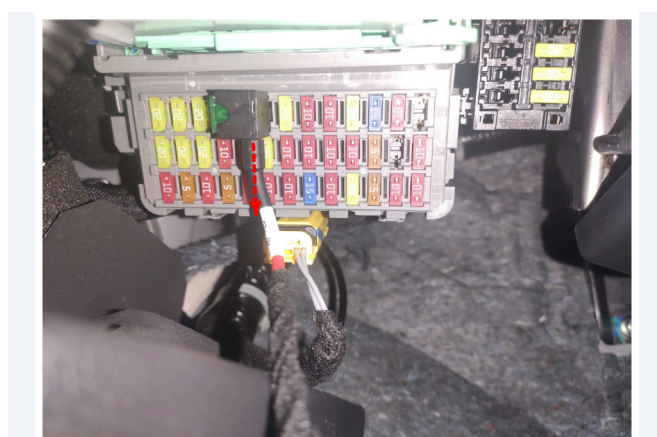

- 26 Move the factory fuse from the fuse box to the fuse tap, then plug the fuse tap into the fuse box with the wire pointing down.

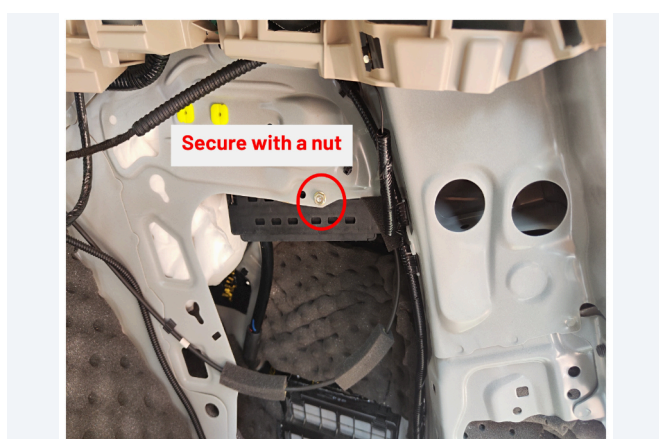

- 27 Secure the tailgate ECU in place with a nut.

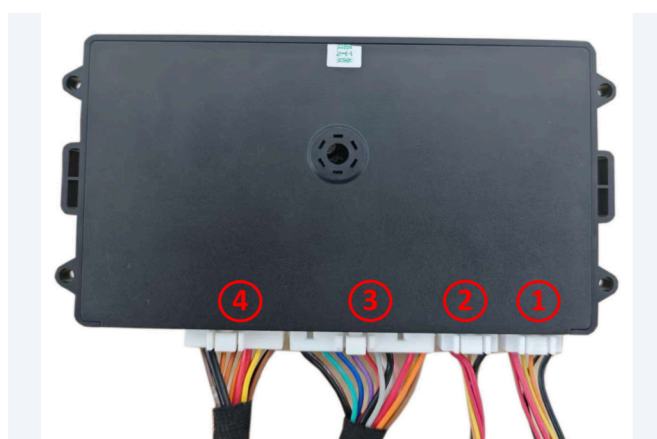

- 28 Insert the strut wire harnesses ①②, lock signal harness ③, and power harness ④ into the tailgate ECU in sequence, then mount the tailgate ECU onto its bracket.



- 29** Press the new tailgate switch once to initialise the system, then test each function of the electric tailgate.

- 30** Install the new tailgate switch and reinstall all trim panels.

System Initialisation

1. Press the newly installed tailgate switch to close the tailgate automatically.
2. Press the exterior tailgate switch to open it; you will hear a long beep.
3. System initialisation is now complete.

Operating Instructions

1. Opening and Closing the Tailgate:
 - Press the unlock button on the remote key 3 times.
 - Press the unlock button in the driver's area 3 times.
 - Press the factory tailgate switch.
 - Press the newly installed tailgate switch.
 - Press the front switch: press and hold for 4 seconds to open, or press briefly to close.

Configuring the Tailgate Switch Settings

- 1** Setting the Maximum Opening Height
Press and hold the switch button on the tailgate. Release it after hearing one long beep - the height has been successfully memorised.
Tip: During tailgate operation, pause it, then manually push the tailgate up to the desired height.
- 2** Adjusting Closing Speed
Press and hold the switch button on the tailgate. Release it after hearing two short beeps - the closing speed-up function has taken effect.
(There are five speed levels. Repeat this process to increase the speed by one level.)
- 3** Adjusting Opening Speed
Press and hold the switch button on the tailgate. Release it after hearing three short beeps - the opening speed-up function has taken effect.
(There are five speed levels. Repeat this process to increase the speed by one level.)

4 Adjusting Braking Force

Press and hold the switch button on the tailgate. Release it after hearing one long beep and one short beep - the braking force has been increased.

(There are five levels. Repeat this process to increase the level by one.)

5 Switch Reminder Sound Toggle

Press and hold the switch button on the tailgate. Release it after hearing one long beep and two short beeps - the switch reminder sound toggle has taken effect.

(Default is silent. Repeat the setting to cycle through the options.)

6 Enter the Voice Wake-Up Word and Command Word Modification Menu

Press and hold the switch button on the tailgate. Release it after hearing one long beep and three short beeps - the voice wake word and command word modification menu entered.

7 Voice Switch Power-Off Toggle Between 72 Hours and 0.5 Hours

Press and hold the switch button on the tailgate. Release it after hearing two long beeps and one short beep - the voice switch power-off toggle between 72 hours and 0.5 hours has taken effect.

8 Voice Switch On and Off

Press and hold the switch button on the tailgate. Release it after hearing two long beeps and two short beeps - the voice switch ON/OFF toggle has taken effect.

(Default is ON. Repeat this step to cycle through the options.)

9 Kick Sensor On and Off

Press and hold the switch button on the tailgate. Release it after hearing two long beeps and three short beeps - the kick sensor ON/OFF toggle has taken effect.

(Default is ON. Repeat the setting to cycle through the options.)

10 Remote Key Activation (Double-Press vs. Triple-Press)

Press and hold the switch button on the tailgate. Release the switch after hearing three long beeps and one short beep - the toggle between double and triple tapping has taken effect. (Default is triple tapping. Repeat this step to cycle through the options.)

11 Tap Sensor On and Off

Press and hold the switch button on the tailgate. Release the switch after hearing three long beeps and two short beeps - the tap sensor ON/OFF toggle has taken effect.

(Default is ON. Repeat this step to cycle through the options.)

12 Toggle Between 2-Press and 3-Press of the Unlock Button On Remote Key

Press and hold the switch button on the tailgate. Release the switch after hearing three long beeps and three short beeps - the toggle between 2-press and 3-press has taken effect. (Default is 3-press. Repeat this step to cycle through the options.)

13 Remote Key Unlock Button Sensitivity (Quick/Slow Press)

Press and hold the switch button on the tailgate. Release the switch after hearing four long beeps and one short beep - the toggle between quick press and slow press has taken effect. (Default is quick press. Repeat this step to cycle through the options.)

14 Factory Reset

Press and hold the switch button on the tailgate. Release the switch after hearing five long beeps. The factory reset has taken effect.

Buzzer Sound Indicators

One Beep: A single beep confirms receipt of an open, close, or pause signal; the tailgate will immediately open, close, or pause.

Two Beeps: The tailgate is fully opened or fully closed.

Three Beeps: The tailgate encountered excess resistance; the intelligent anti-pinch safety feature has been activated.

Technical Support

If you need help setting up or using your Aerpro product, now or in the future, call Aerpro Support Australia on 03 8587 8889, Monday to Friday, 9am to 5pm AEST.

To download a digital copy of this manual, or other Aerpro manuals and software, visit aerpro.com.