


STEERING WHEEL CONTROL INTERFACE FOR KIA VEHICLES

SWKI2C

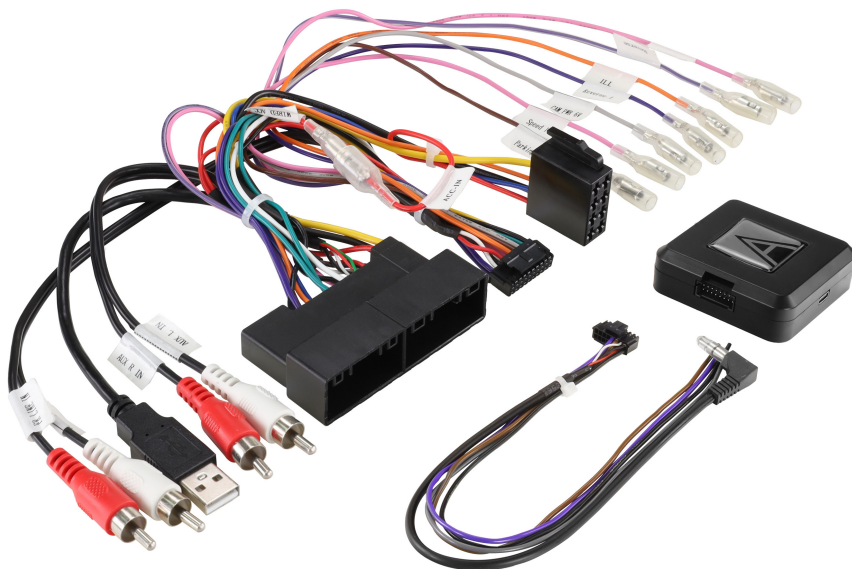

INSTALLATION GUIDE

The SWKI2C allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into the vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration.

VEHICLE APPLICATION

HYUNDAI	
ix35 (EL)	2010 - 2015
i40 (VF)	2011 - 2019
Sonata (YF)	2009 - 2014
Tucson (TL)	2010 - 2015
Veloster	2017 - 2021*

Kia	
Sportage (SL)	2010 - 2016

KEY FEATURES

- RETAIN STEERING WHEEL CONTROL FUNCTIONALITY
- REPLACE FACTORY RADIO
- OUTPUT FOR SPEED PULSE, REVERSE & PARK BRAKE
- SOFTWARE UPDATEABLE
- REMAPPABLE BUTTONS

Vehicles with OEM Sat Nav
Vehicles with OEM amplified system

Fader not supported

This harness allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into a vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration. Installation requires a certain level of technical knowledge. Prior to installation please read this manual in its entirety.


It is essential to use the correct tools during installation to prevent any damage to the vehicle or the product itself.

Please note that we cannot be held liable for any issues arising from improper installation.


Before proceeding with installation, disconnect the negative battery terminal and ensure the key is removed from the ignition.

CONNECTION DIAGRAM


HEAD UNIT CONNECTION LEAD

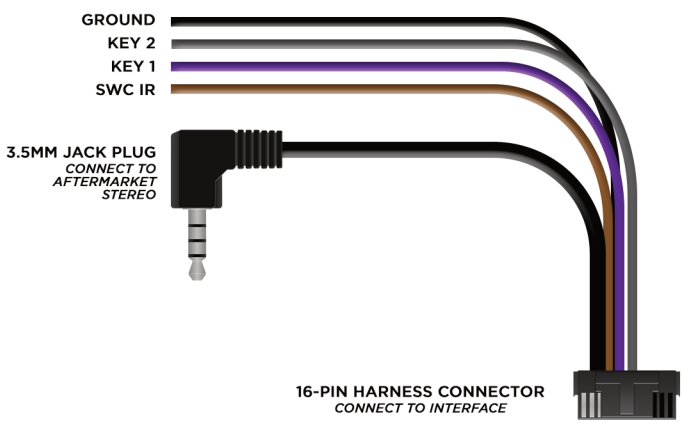

SWC INTERFACE

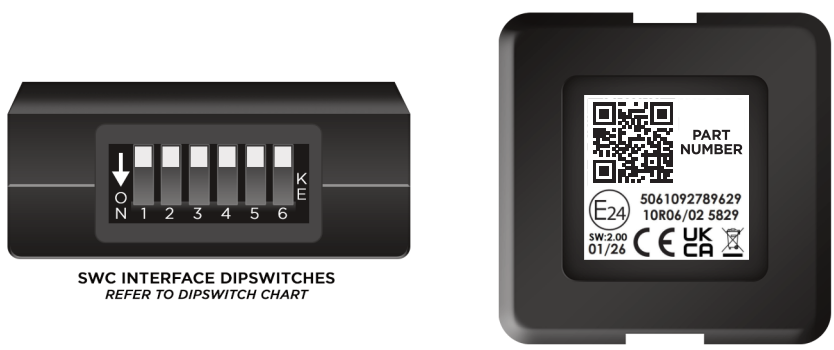

SWC VEHICLE HARNESS

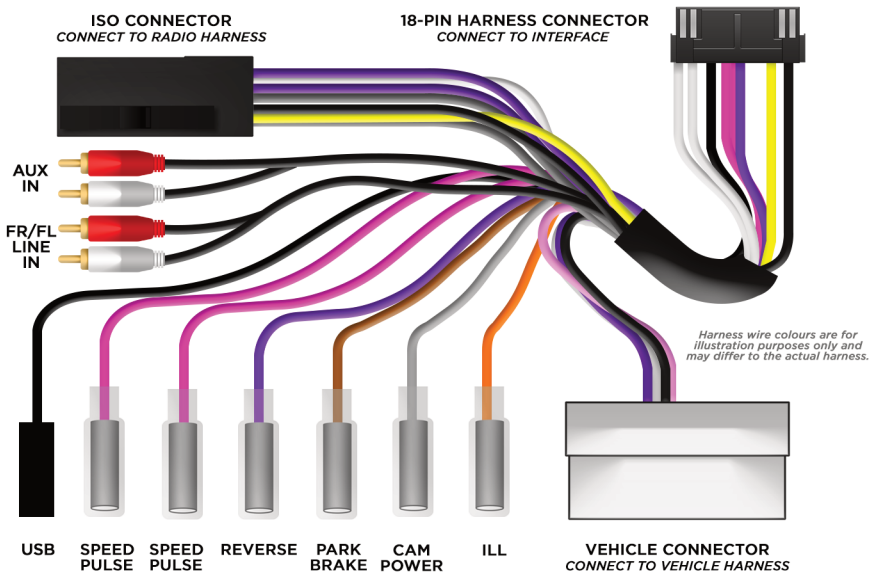


CONNECTION GUIDE

BEFORE INSTALLATION

Prior to installing the interface, it is essential to remove and disconnect the factory stereo. For guidance on this process, please refer to the vehicle owner's manual/handbook or seek assistance from a professional.

SETTING THE DIPSWITCHES


This interface includes a set of dipswitches. Consult the dipswitch selection guide to select the appropriate configuration. To activate a dipswitch, press it downward into the 'ON' position. Refer to the diagram for an example of the 'KENWOOD' dipswitch configuration.

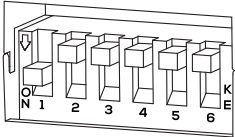

INSTALLATION

1. Take the interface, then connect the 16-PIN head unit connection lead and the 18-PIN steering wheel harness connectors to their respective ports.
2. Connect the head unit connection lead to the steering wheel remote input on the rear side of the aftermarket stereo. Connection methods vary based on the stereo brand, utilising either a 3.5mm jack connector SWC IR wire or wired inputs KEY1 and KEY2. *For specific connection guidance, refer to your aftermarket stereo's installation manual if not clearly labelled on the stereo harness.*
3. Connect the power/speaker ISO connector from the interface to the corresponding power/speaker ISO connection on the aftermarket stereo. *For aftermarket stereos lacking an ISO connector, refer to the "Wiring Key" on Page 2 for guidance on connecting wires. Certain interfaces may also include extra "flying" wires for additional functionalities such as parking brake trigger, reverse gear, and speed pulse. Further information on these wires is available in the "Flying Wire Wiring Key" section.*
4. Connect the vehicle-specific connectors from the interface harness to the corresponding connectors on the vehicle harness.
5. Connect the flying wires on the harness to the rear of the stereo (if applicable).
6. Connect the antenna adapter to the vehicle's existing connection at the rear of the aftermarket stereo.
7. When installing an aftermarket reverse camera, connect the yellow RCA from the harness to the yellow RCA of the aftermarket camera. (If supported by the interface and vehicle)
8. When installing a DAB antenna, ensure to connect the DAB aerial connector to the rear of the new stereo.
9. After connecting all wires (along with any additional accessories), it's crucial to thoroughly test the stereo and steering wheel controls before reassembling the dashboard. If steering wheel controls are unresponsive, inspect connections and check dipswitch settings. Repeat the connection process if necessary, following the outlined steps.

STEERING WHEEL CONTROL CONFIGURATION

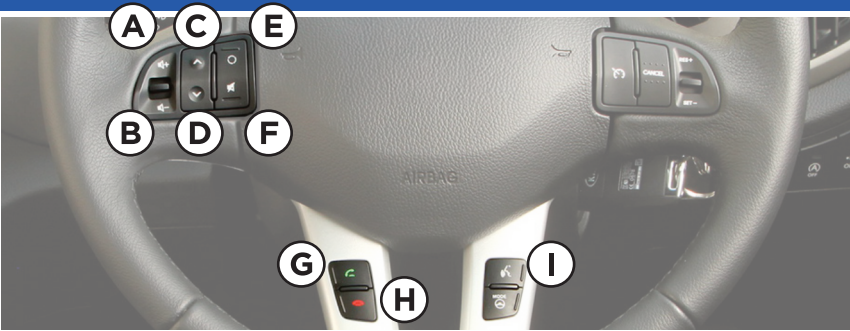

- | | | |
|----------------------|---------------------|------------------------|
| A Volume Up | D Track Down | G Pick Up |
| B Volume Down | E Source | H Hang Up |
| C Track Up | F Mute | I Voice Control |

The provided diagram, while meticulously researched, serves as an example only. Actual steering wheel control configurations may vary dependant on each vehicle.

BUTTON REMAPPING

The steering wheel buttons listed offer the flexibility of being re-configured or assigned dual functions. The availability of these buttons depends on the specific vehicle to which the interface is being installed and if the aftermarket radio supports them.

In addition to button remapping, we offer the option to assign dual functions to each button on the steering wheel. This means that every button can be programmed to execute both a short press command and a long press command.

You can also add your own bespoke configuration. Button configuration can be done by PC, MAC and smart phone via the USB port.

Button Remapping instructions can be found in a separate guide on our website.

WIRING KEY





ISO CONNECTOR WIRING KEY	Purple	Right Rear Speaker +	Grey	Right Front Speaker +	Yellow	Permanent 12V		
	Purple/Black	Right Rear Speaker -	Grey/Black	Right Front Speaker -	Black	Ground		
	Green	Left Rear Speaker +	White	Left Front Speaker +	Red	Ignition 12V		
	Green/Black	Left Rear Speaker -	White/Black	Left Front Speaker -	Orange	Illumination		
FLYING WIRE WIRING KEY	Yellow	Permanent 12V	Black	Ground	Pink	Speed Pulse	Blue	Amp Remote
	Red/White AUX	AUX-Input	Red	Ignition 12V	Purple	Reverse Gear		
OUTPUTS & RATINGS	Standby Current	<3mA	Operating Voltage	6V to 16V	Operating Temperature	-20C to 85C *rated at 25 degrees Centigrade		

DIPSWITCH CONFIGURATION

Manufacturer	System	DIP Switch Settings					Additional Comments
		1	2	3	4	5	
RESERVED	NA	OFF	OFF	OFF	OFF	OFF	SW UPDATE BOOT MODE
AERPRO	Analog	OFF	OFF	OFF	ON	OFF	MALE 3.5MM JACK
ALPINE	IR DATA	OFF	ON	OFF	OFF	OFF	MALE 3.5MM JACK
CLARION	IR DATA	ON	OFF	OFF	ON	OFF	MALE 3.5MM JACK
GRUNDIG	IR DATA	OFF	ON	OFF	ON	OFF	BROWN SWC IR
JVC	IR DATA	OFF	OFF	ON	OFF	OFF	BROWN SWC IR
KENWOOD 1	IR DATA	ON	OFF	OFF	OFF	OFF	BROWN SWC IR
KENWOOD 2	IR DATA	ON	ON	OFF	OFF	OFF	BROWN SWC IR
LG	Analog	OFF	OFF	ON	ON	OFF	MALE 3.5MM JACK
PHILIPS	IR DATA	OFF	ON	OFF	ON	OFF	BROWN SWC IR
PIONEER 1	Analog	OFF	OFF	OFF	ON	ON	MALE 3.5MM JACK
PIONEER 2	Analog	OFF	OFF	OFF	ON	OFF	MALE 3.5MM JACK
SONY	Analog	OFF	OFF	ON	ON	OFF	MALE 3.5MM JACK
ZENEC	IR DATA	ON	ON	OFF	ON	OFF	BROWN SWC IR
KEY1 / KEY2	Analog	OFF	OFF	OFF	ON	ON	KEY1 / KEY2 WIRE
ANALOG SINGLE WIRE	Analog	ON	ON	ON	ON	OFF	BROWN SWC IR / KEY1

KEY1 and KEY2	KEY1 and KEY2 are specifically tailored for analog learning mode-style radios. Our SWC module is designed with a resistor chain that precisely matches the required resistance for seamless compatibility with this type of head unit.
KEY1 and KEY2 EXTEND	This mode extends every button press to 2 seconds during the learning process. However, with rolly wheel-designed steering wheel buttons, holding for 2 seconds isn't feasible. Our KEY1 and KEY2 extend feature addresses this by automatically prolonging each press, simplifying head unit programming even in such scenarios. Extend mode is not intended for normal use, it is only used in the teaching process.
ANALOG SINGLE WIRE and ANALOG SINGLE WIRE EXTEND	This function operates similarly to KEY1 and KEY2 but transmits all unique values through the IR SWC single wire. This is crucial for compatibility with learning-style head units featuring only one learning input wire. To ensure compatibility, we've incorporated this feature into our steering wheel control interface, ensuring seamless operation across various head unit setups. The Analog Extend mode functions identically to its counterpart within the KEY1 and KEY2 system but transmits through a single wire.

    SWC INTERFACE

			
18 PIN HARNESS CONNECTOR	DIPSWITCHES	16-PIN HEAD UNIT CONNECTION LEAD	USB-C

TECHNICAL SUPPORT

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia **TEL: 03 8587 8889** MON-FRI 9AM - 5PM AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the **<http://aerpro.com>** website.