Vehicle-Specific Power Tailgate Lift System



Toyota Landcruiser 200

2016-2020

Part no. ARTLC216

Points to Note

- For safety and to ensure proper product use, we recommend professional installation. Do not attempt to disassemble or install the system yourself, as this may result in product damage or personal injury.
- Route each wire harness according to the instructions in this manual, securing them to the vehicle's factory harnesses with cable ties. Ensure the wiring is kept clear of fasteners and screw holes to prevent the harnesses from being crushed or pinched by trim panel clips and screws during reassembly.
- Some wire harness terminals (indicated by the red ellipses below) are left disconnected during manufacturing. Please insert these terminals into their corresponding connectors before routing the harnesses to prevent short circuits. Once routed, connect the remaining harness plugs (indicated by the blue ellipses) to the vehicle's factory plugs.



- Before beginning installation, inspect the vehicle's instrument panel display, verify that all buttons, doors, and windows operate correctly, and check for any pre-existing scratches on the interior or exterior. Report any issues to the customer immediately.

Installation Precautions

- Remove any metal accessories or hard objects from your person during installation to prevent damaging the vehicle's paint, seats, or interior. Carefully store all removed trim components in a safe location to avoid scratches.
- The illustrations in this manual are for reference only. While specific vehicle configurations may vary slightly from the pictures, the general installation methods remain the same.

In the Box

1		Strut	Qty 2
2		Tailgate ECU	Qty 1 set
3		Wire harness	Qty 1 set
4		Power latch	Qty 1
5		Tailgate switch	Qty 1

Other Accessories

Screws, brackets

Recommended Tools



Threading tools



Quick release ratchet wrench set



Electric drill and drill bits



Other tools


Notice

This vehicle-specific kit converts the manual tailgate on the vehicle listed in this manual to power operation. Installation requires a good level of technical knowledge. Please read this manual in its entirety before you start.

Use the correct tools during installation to prevent damage to the vehicle or the product. Please note that we cannot be held liable for any issues arising from improper installation.

Before starting the installation, disconnect the negative battery terminal and make sure the ignition is off and the key is removed or kept away from the vehicle.

Installation

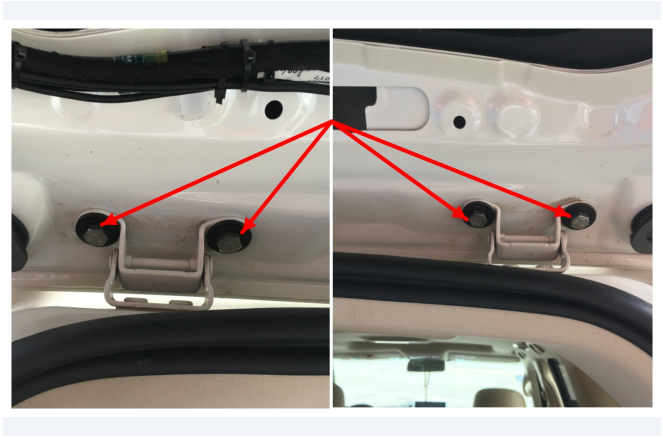

1 Add the reinforcing washers to the hinges and secure them with provided screws.



2 Remove the indicated driver side trim panels and door sill panel.



3 Remove the rear left door sill panel and B-pillar trim panel.




4 Remove the tailgate trim panels (the screws are circled).




5 Remove the trim panels on the left side of the boot.



6 Remove the original latch.

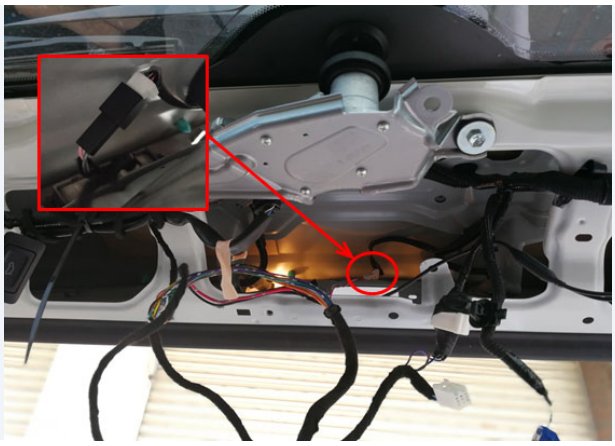

7 Connect the lock signal harness connectors to the tailgate handle switch. The 2016 and 2018 models use different handle switch connectors, so two pairs of plugs are provided; select the correct pair for your vehicle's model year.

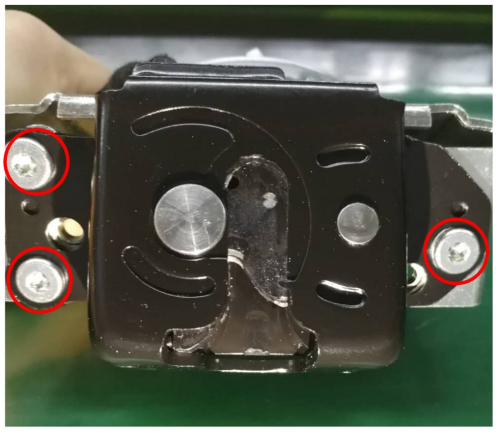


8 Remove the screws from the power latch.



9 Install the power latch.



10 Connect the lock signal harness connectors to the power latch.

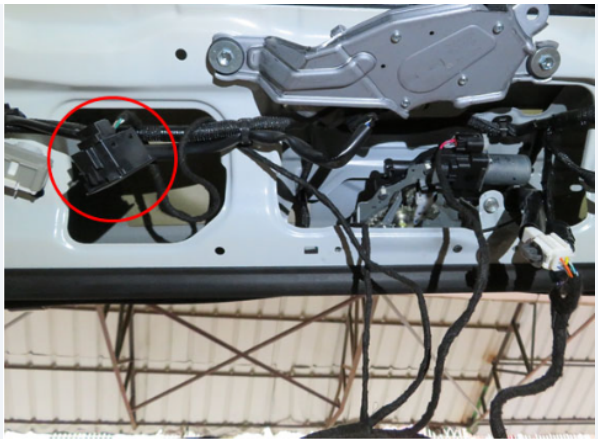

11 Connect the lock signal harness connector to the new tailgate switch.




12 Add a shim under the tailgate lock striker (fasten it with the provided screws).



13 Remove the gas struts. To do this safely, remove and replace one strut at a time.



14 Replace the left and right body ball studs.

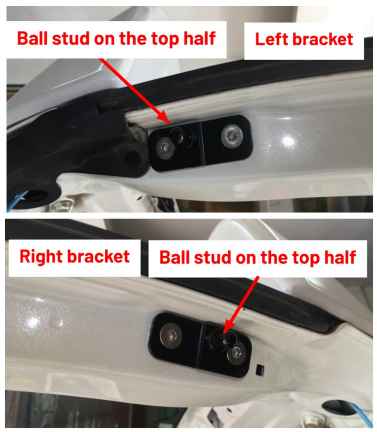

15 Replace the left and right tailgate brackets. The ball studs are on the upper half, near the spoiler.



16 Install the electric struts (L for the left side, R for the right side, as indicated by the first letter of the strut code).




17 Remove left and right tailgate rubber pads.



18 Open a hole at the indicated location of the rubber pad (as long as the connectors of strut wire harness can fit through).




19 Remove the screw from the hole and thread the strut wire harness through the hole.

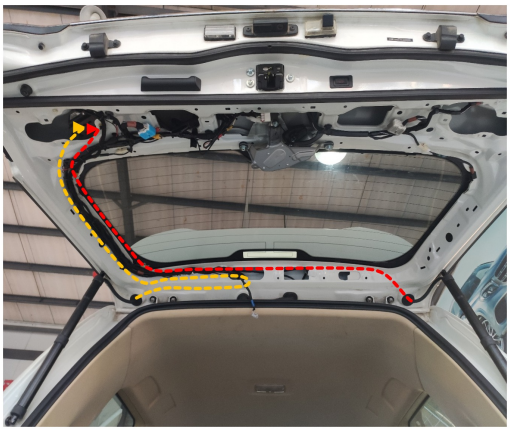


20 Route the strut wire harnesses as indicated.



21 Reinstall the screw and seal the hole securely. Repeat on both sides.

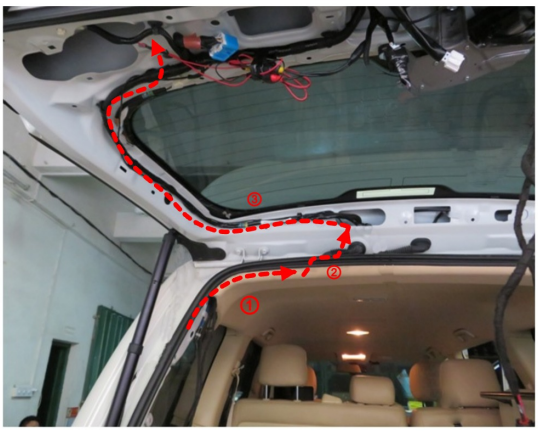


22 Route the power harness to the left side of the tailgate. Do not connect it until the terminals have been inserted into the connector.

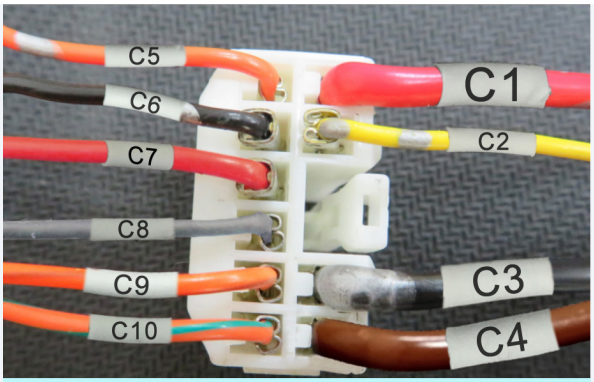

Note: For models with fewer than 10 wires, just insert them according to the corresponding label or color.

23 Insert the power harness terminals into the wire harness connector according to the diagram.

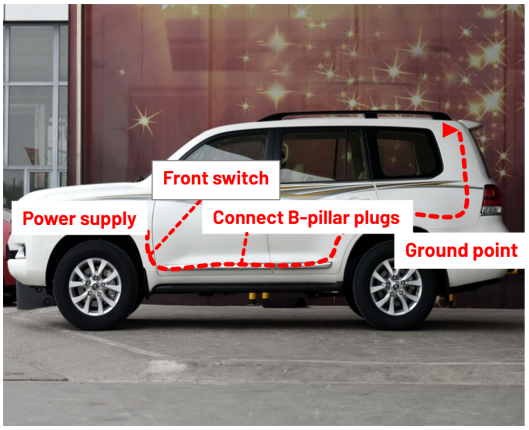


24 Route the power harness.



25 Secure the ground wire connector to the indicated grounding point.




26 Route the switch wire harness to the driver's area.

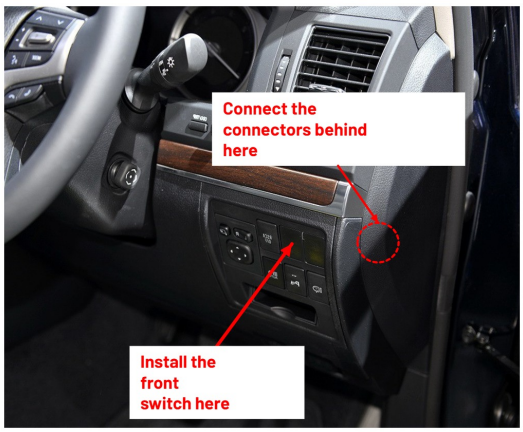

27 Remove the blank button from the switch panel and install the front switch.




28 Connect the power harness connectors to the B-pillar signal connectors.

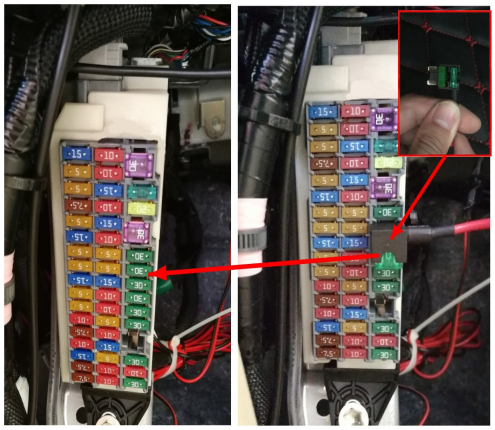

29 Move the indicated fuse (sixth in the rightmost column) to the fuse tap, then plug the fuse tap into the fuse box.




30 Insert the strut wire harnesses ①②, lock signal harness ③, and power harness ④ into the tailgate ECU in sequence. Mount the tailgate ECU on its bracket.

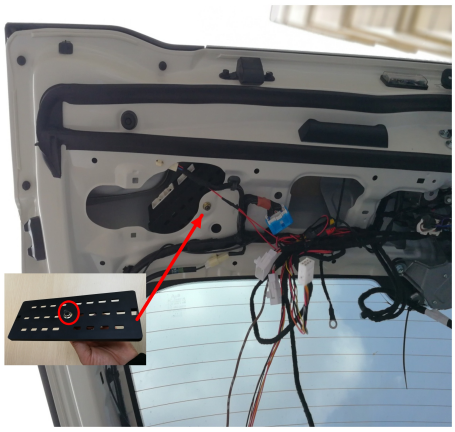


31 Screw a nut onto the tailgate ECU bracket, then secure it at the indicated hole.



32 Initialise the system, then test the electric tailgate's functions.

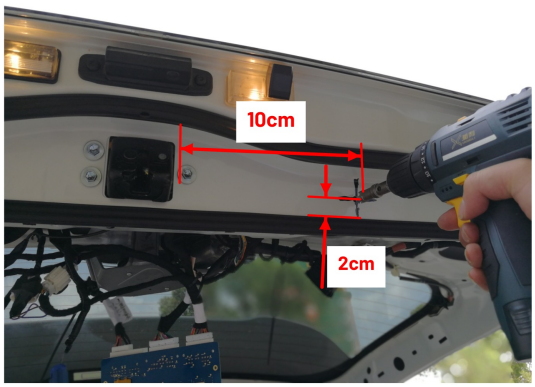

33 Stick the hole template to the indicated position on the tailgate and cut a hole for installing the new tailgate switch.

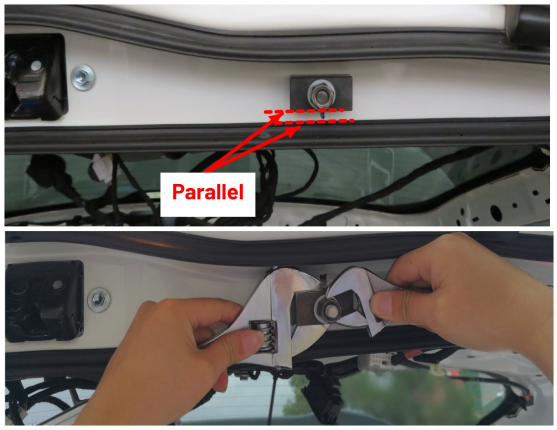

34 Install the hole opener, ensuring its edge is parallel to the lower edge of the tailgate, then cut the hole using one wrench to hold the hole opener and another to turn the nut.

System Initialisation

1. Press the newly installed tailgate switch to close the tailgate automatically.
2. Press the exterior tailgate switch to open it; you will hear a long beep.
3. System initialisation is now complete.

Operating Instructions

1. **Opening and Closing the Tailgate:**
   - Press the unlock button on the remote key 3 times.
   - Press the unlock button at the driver's area 3 times.
   - Press the factory tailgate switch.
   - Press the newly installed tailgate switch.
   - Press the front switch: hold for 4 seconds to open, or press once to close.
2. **Pausing the Tailgate:**

   While the tailgate is in motion, press any of the control buttons to pause it. Pressing a button again will reverse the tailgate's direction.
3. **Memorising the Height:**

   Open the tailgate to the desired height. Press and hold the newly installed tailgate switch, then release it when you hear a long beep. The height is now memorised.

   Tip: While the tailgate is moving, pause it, then push it by hand to the ideal height.

Buzzer Sound Indicators

One Beep: The tailgate has received an open, close, or pause signal and will respond immediately.

Two Beeps: The tailgate is fully opened or fully closed.

Three Beeps: The tailgate encountered excess resistance; the intelligent anti-pinch safety feature has been activated.

Long Beep: The height has been memorised.

Technical Support

If you need help setting up or using your Aerpro product, now or in the future, call Aerpro Support Australia on 03 8587 8889, Monday to Friday, 9am to 5pm AEST.

To download a digital copy of this manual, or other Aerpro manuals and software, visit aerpro.com.