


CHFO19C

Steering Wheel Control Interface *for select Ford vehicles*

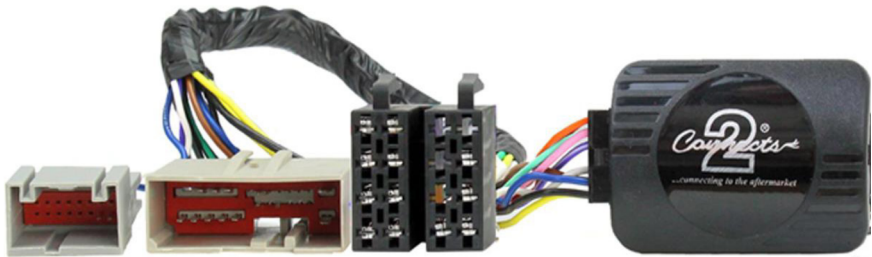

Vehicle Application

Ford Edge 2007 - 2010
 Ford Escape 2008 - 2012
 Ford Expedition 2007 - 2014
 Ford Explorer 2006 - 2010
 Ford Explorer (Sport Trac) 2007 - 2010
 Ford Five Hundred 2005 - 2007
 Ford Focus 2008 - 2011
 Ford Flex 2008 - 2011
 Ford Freestyle 2005 - 2007
 Ford Fusion 2006 - 2012
 Ford Mustang 2005 - 2014
 Ford Taurus 2008 - 2012

Ford Taurus (X) 2008 - 2009
 Ford F150 (F Series Pickup) 2009 - 2012
 Ford F250 (F Series S.Duty Pickup) 2008 - 2012
 Lincoln MKX 2007 - 2010
 Lincoln MKZ 2007 - 2010
 Lincoln Navigator 2007 - 2014
 Lincoln Zephyr 2006>
 Mercury Mariner 2008 - 2010
 Mercury Milan 2006 - 2010
 Mercury Montego 2005 - 2007
 Mercury Mountaineer 2006 - 2010
 Mercury Sable 2008 - 2009

Key Features

- Retains Steering Wheel Controls (if equipped)
- Retains Factory Phone Buttons (if equipped)

Designed and
 Engineered
 in the UK. 

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s.

ABOUT THIS PRODUCT

CHFO19C

CAN-Bus Steering Wheel Control Interface for select Ford vehicles. Retains steering wheel controls and factory phone buttons (if vehicle is equipped).

WIRING COLOUR CODES

| | | | |
|--------------|-----------------------|--------|---------------|
| Purple | Right Rear Speaker + | Yellow | Permanent 12V |
| Purple/Black | Right Rear Speaker - | Black | Ground |
| Green | Left Rear Speaker + | Red | Ignition 12V |
| Green/Black | Left Rear Speaker - | | |
| Grey | Right Front Speaker + | | |
| Grey/Black | Right Front Speaker - | | |
| White | Left Front Speaker + | | |
| White/Black | Left Front Speaker - | | |

ADDITIONAL WIRING COLOURS

| | |
|--------------|-------------------|
| Purple/White | Reverse Gear |
| Light Green | Park Brake |
| Light Pink | Speed Pulse |
| Blue/White | Amplifier Turn On |

PRIOR TO INSTALLATION


*Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. **Aerpro can not be held responsible for the installation of this product.***

TECHNICAL SUPPORT

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia TEL: 03 – 8587 8898 FAX: 03 – 8587 8866 Mon-Fri 9am – 5pm AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the <http://aerpro.com> website.

FITTING GUIDE

1. Remove and disconnect the original head unit.
2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface.



3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit.

NB: This may be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted. Please see the head unit installation manual for further information on where to connect.


Important: This step must be completed before connecting power to the interface. Failure to so do may result in no steering wheel control function.



4. Connect the 14 way molex connector to the interface




5. Connect the male power/speaker ISO harness to the female power/speaker ISO harness from the aftermarket head unit. For aftermarket head units without an ISO connector, please refer to "Wiring Colour Codes" on Pg. 2.

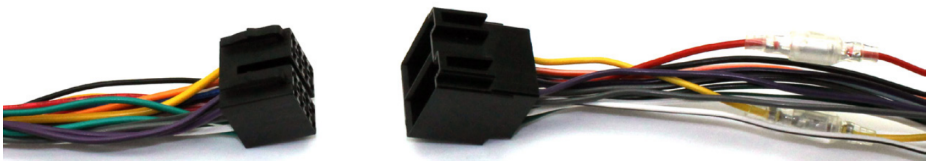

FITTING GUIDE

6. Connect the female vehicle specific connector/s on the harness to the male vehicle connector/s from the vehicle. Test head unit for correct operation.

STEERING WHEEL CONTROL FUNCTIONALITY

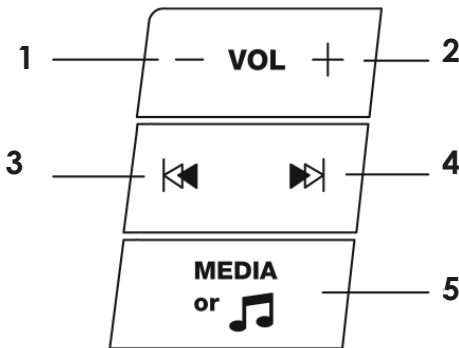

EXAMPLE BUTTON CONFIGURATION
(MAY DIFFER DEPENDING ON VEHICLE)

| Legend | Function |
|--------|----------|
| 1 | Volume - |
| 2 | Volume + |
| 3 | Track - |
| 4 | Track + |
| 5 | Source |

NB: INTERFACE WILL ALSO RETAIN THE VEHICLE'S FACTORY PHONE BUTTONS (IF EQUIPPED)