



1  
Connection points  
radio frame / Dashboard




2  
Remove the original panel starting at position shown



3  
Unclip the trim frame surrounding the OEM head unit and remove it



4  
Use a screwdriver to remove screws from the original car-radio

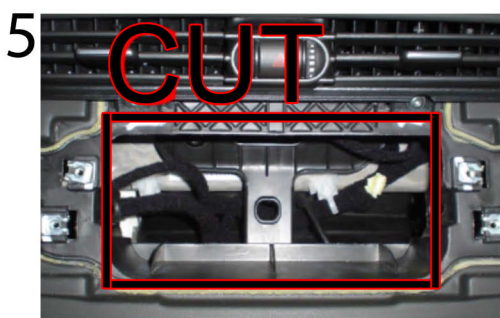


5  
Cut the plastic frame and remove it



6  
This is the result after cutting the plastic frame



7  
Insert the snap fastener to the radio frame supplied with the kit

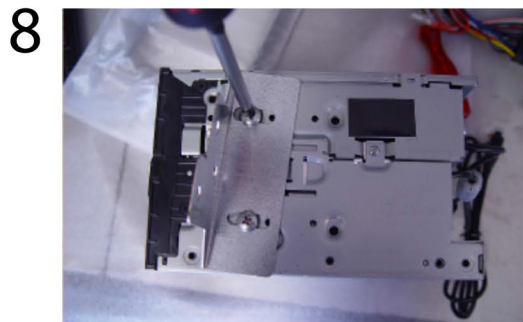

8  
Screw the brackets to the head unit



9  
Connect all the cables then mount the radio and screw it into place



10  
Clip the fascia into place. Installation is now complete