

Steering Wheel Control Interface To Suit Ford

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 


AAFD01

Ford Focus	2015 - 2018
Ford Ranger MKII	2015 - 2018
Ford Ranger MKIII	2018 - 2021



ASFO1C

Ford Fiesta	2006 - 2008
Ford Focus	2005 - 2009
Ford Kuga TE	2012
Ford Transit	2007 - 2013

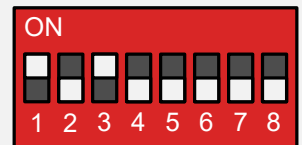

ASFO2C

Ford Focus	2008 - 2011
------------	-------------




ASFO4C

Ford Fiesta	2008 - 2012
Ford Fiesta	2012 - 2018




ASFO7C

Ford Ecosport	2013 - 2017
Ford Focus	2012 - 2014
Ford Focus	2015 - 2018
Ford Kuga	2013 - ON
Ford Ranger	2012 - 2015
Ford Ranger MKII	2015 - 2018
Ford Transit Custom	2013 - 2017
Ford Transit VO	2014 - 2017

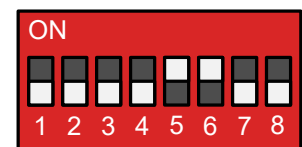

ASFO20C


Ford Ranger MKIII	2018 - 2021
-------------------	-------------

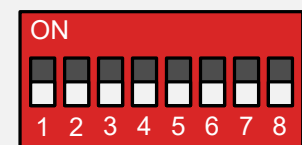

Stereo Dipswitch Settings

Prior to installation, configure the four DIP switches for your specific stereo brand as shown below. Please disconnect the module before setting up the DIP switch.

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 

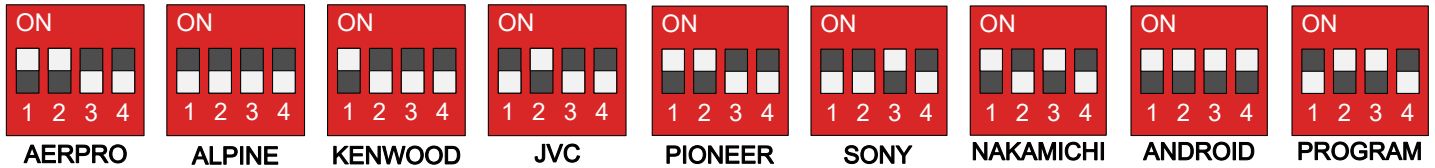

Steering Wheel Control Setup

CONNECTION OPTIONS:


Option A: (Both 8-Pin Connector & 3.5mm Jack) Aerpro AM905D, AM1005D & Pioneer DMH-AP6650BT it is recommended that both the 8-Pin connector and 3.5mm jack are connected.

Option B: (3.5mm Jack): Connect the 3.5mm jack to the female SWC jack input from headunit.

Option C: (Wired Leads): For units without a direct plug-in connect SWC Key 1, some instances will require SWC Key 2, and SWC GND also.

Option D: (8-Pin Connector): Connect the 8-pin plug to the SWC input only for Nakamichi, Android Headunits & Alpine INE-AW409S, INE-AX809

IMPORTANT NOTE: Unless otherwise stated most headunits only require one connection for SWC retention.

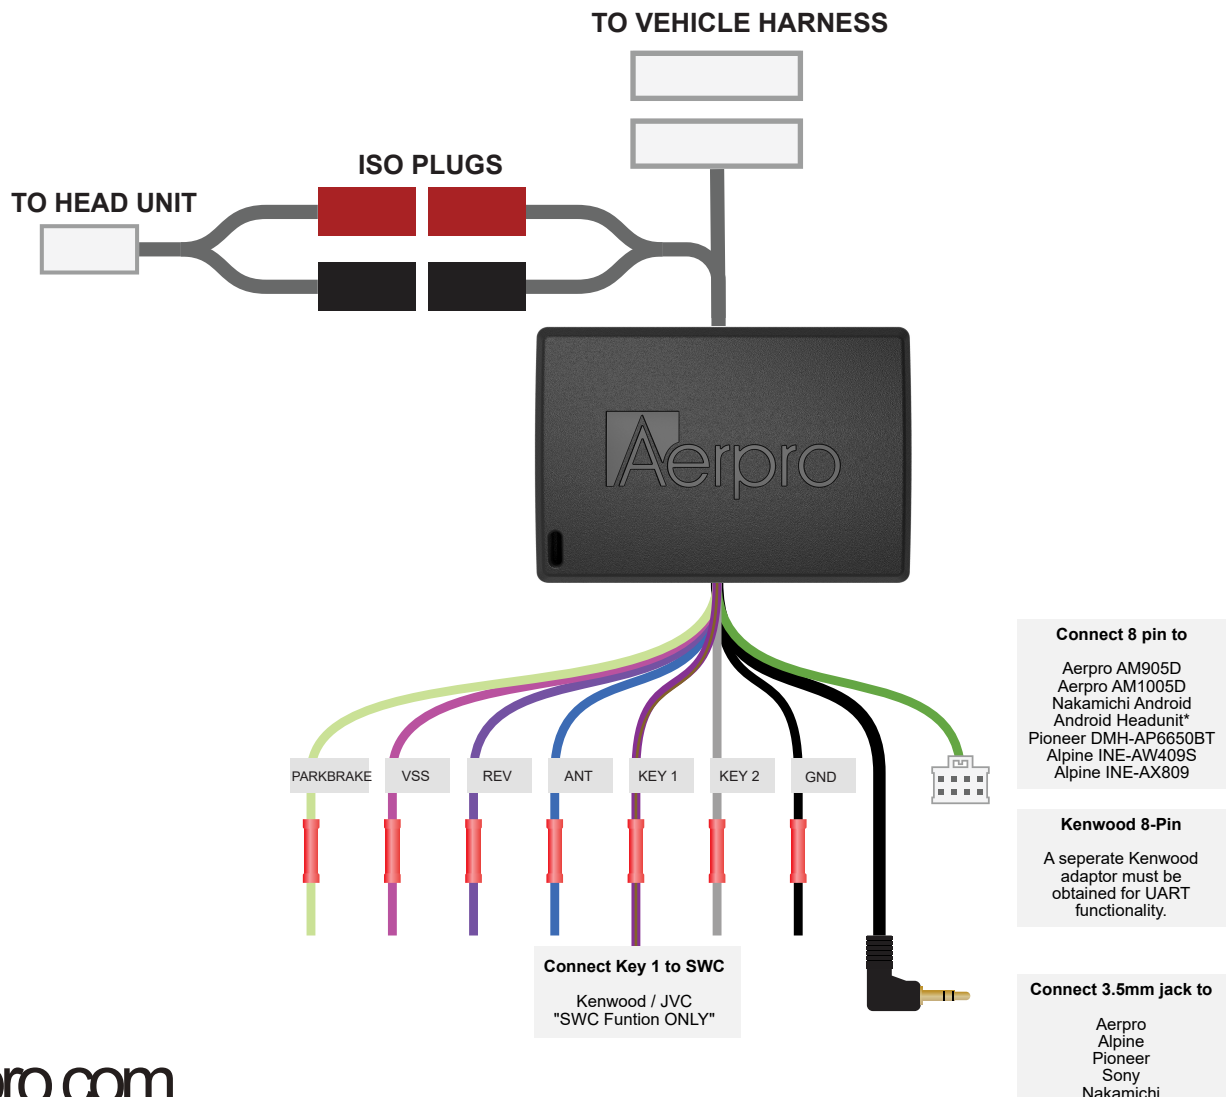

Steering Wheel Control Configuration

Aerpro: AM905D, AM1005D

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Alpine: Operate directly.

JVC: Operate directly.

Kenwood: Operate directly.

Nakamichi: Presets: NA3615 (W7, W9, WX, M9, MX), NA3510-M7, NA3625 (W6, WUX).

Pioneer: Settings → Steering Wheel Control → With Adapter.

Pioneer DMH-AP6650BT: (Two setup methods)

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Sony: Settings → General → Steering Control → Preset.

If Preset does not work use Custom: If preset fails, set DIP to 1-OFF, 2-ON, 3-ON, 4-OFF.

Android Headunit: (Inc. Alpine INE-AW409S, AX809; Nakamichi Android)

Connect 8-pin (CANBUS) or Key 1, Key 2, GND.

With CANBUS: DIP Switch to Android → Factory Settings.

- Alpine: Password 1967.
- Nakamichi: Password 1948 → Select Hiworld as provider → Choose vehicle type.

Without CANBUS: DIP Switch to Program → Select SWC Learning in stereo menu.

Time Setting (If applicable)

1. Enter Setup Mode

Press and hold the Voice button on the steering wheel for 15 seconds to enter time Setup Mode.

This mode allows adjustment of the clock (time).

2. Adjust Time

Use the Volume Up and Down buttons on the steering wheel to change the time, press Next to change Hour-Minutes Date-Month-Year.

3. Exit Setup Mode

Press Next after set up year will exit the Setup Mode.

Technical Support

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia
TEL: 03 8587 8889 MON-FRI 9AM – 5PM AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the <http://aerpro.com> website.