


Steering Wheel Control Interface To Suit Holden & Isuzu

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 


ASGM1C

Holden Barina Sedan	2006 - 2011
Holden Barina Hatch	2008 - 2011
Holden Captiva 7	2006 - 2015
Holden Epica	2007 - 2011

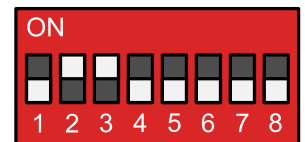


ASVTVXC

Holden Commodore VT	1997 - 1999
Holden Commodore VX, VU	2000 - 2002

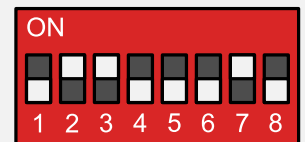


ASVYVZC

Holden Commodore VY	2002 - 2004
Holden Commodore VZ	2004 - 2007
Holden Monaro	2003 - 2005
Holden Statesman	2003 - 2006

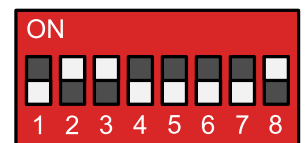


ASIZ2C

Isuzu Dmax	2009 - 2011
Isuzu Dmax	2012 - 2020
Isuzu Mux	2012 - 2020

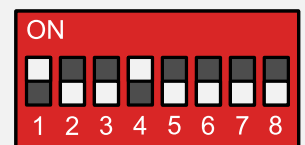


ASIZ3C

Isuzu Dmax Clarion Nav	2012 - 2020
Isuzu Mux Clarion Nav	2012 - 2020

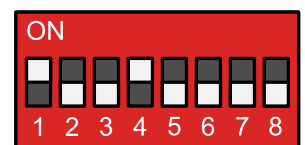

ASIZ4C


Isuzu Dmax	2021 - 2024
Isuzu Mux	2021 - ON

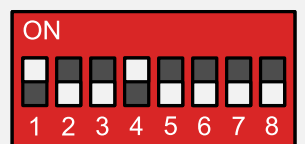

Stereo Dipswitch Settings

Prior to installation, configure the four DIP switches for your specific stereo brand as shown below. Please disconnect the module before setting up the DIP switch.

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 

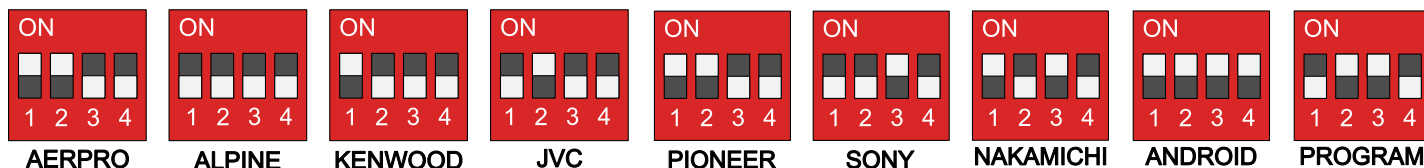

Steering Wheel Control Setup

CONNECTION OPTIONS:


Option A: (Both 8-Pin Connector & 3.5mm Jack) Aerpro AM905D, AM1005D & Pioneer DMH-AP6650BT it is recommended that both the 8-Pin connector and 3.5mm jack are connected.

Option B: (3.5mm Jack): Connect the 3.5mm jack to the female SWC jack input from headunit.

Option C: (Wired Leads): For units without a direct plug-in connect SWC Key 1, some instances will require SWC Key 2, and SWC GND also.

Option D: (8-Pin Connector): Connect the 8-pin plug to the SWC input only for Nakamichi, Android Headunits & Alpine INE-AW409S, INE-AX809

IMPORTANT NOTE: Unless otherwise stated most headunits only require one connection for SWC retention.

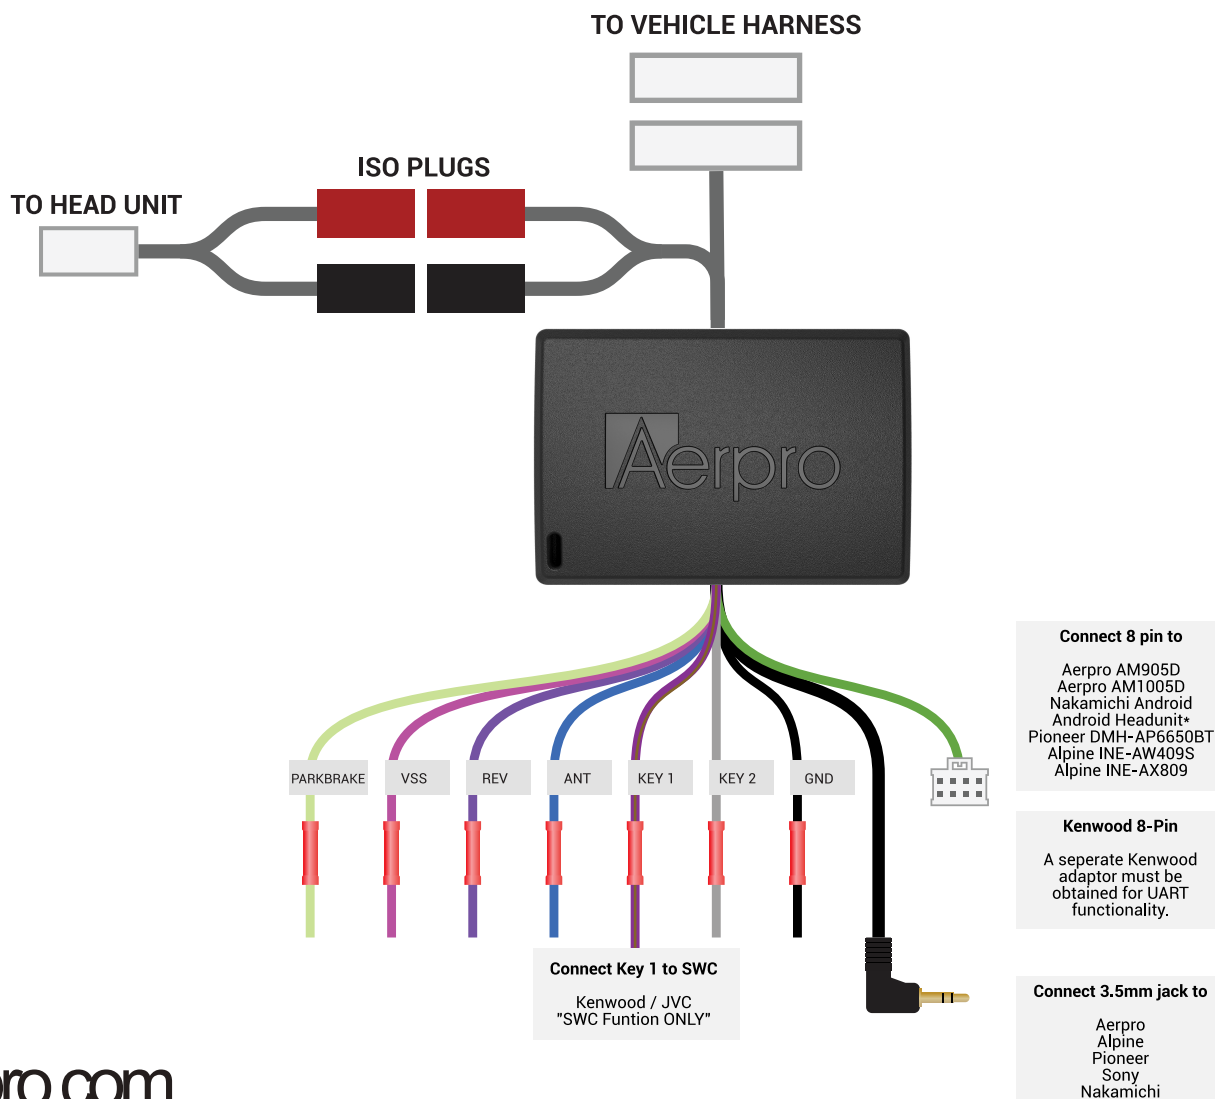

Steering Wheel Control Configuration

Aerpro: AM905D, AM1005D

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Alpine: Operate directly.

JVC: Operate directly.

Kenwood: Operate directly.

Nakamichi: Presets: NA3615 (W7, W9, WX, M9, MX), NA3510-M7, NA3625 (W6, WUX).

Pioneer: Settings → Steering Wheel Control → With Adapter.

Pioneer DMH-AP6650BT: (Two setup methods)

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Sony: Settings → General → Steering Control → Preset.

If Preset does not work use Custom: If preset fails, set DIP to 1-OFF, 2-ON, 3-ON, 4-OFF.

Android Headunit: (Inc. Alpine INE-AW409S, AX809; Nakamichi Android)

Connect 8-pin (CANBUS) or Key 1, Key 2, GND.

With CANBUS: DIP Switch to Android → Factory Settings.

- Alpine: Password 1967.
- Nakamichi: Password 1948 → Select Hiworld as provider → Choose vehicle type.

Without CANBUS: DIP Switch to Program → Select SWC Learning in stereo menu.

Technical Support

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia **TEL: 03 8587 8889** MON-FRI 9AM – 5PM AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the <http://aerpro.com> website.