


Steering Wheel Control Interface To Suit Honda

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 


ASHO1C

Honda Civic Hatchback	2000 - 2005
Honda Civic Sedan	2000 - 2005
Honda CRV	2002 - 2006
Honda S2000	1999 - 2008

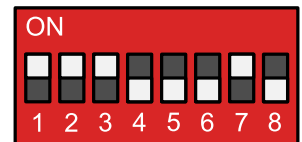


ASHO5C

Honda Civic Hatch	2006 - 2011
Honda Civic Sedan	2006 - 2011
Honda CRV	2006 - 2011

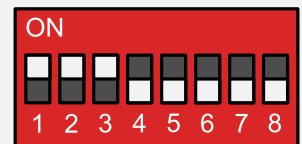

ASHO6C

Honda City	2009 - 2012
Honda Insight	2010 - 2013

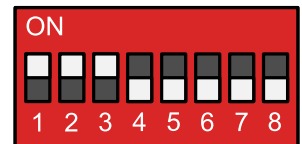


ASHO6CA

Honda Jazz	2008 - 2013
------------	-------------




ASHO7C

Honda Jazz	2014 - ON
------------	-----------

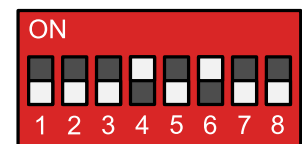


ASHO8C

Honda Civic (Hatch)	2012 - 2015
Honda City	2014 - ON
Honda HRV (WO/Side Cam)	2014 - 2016
Honda Jazz	2014 - ON

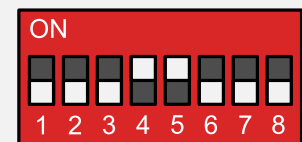

ASHO9C

Honda Civic (Hatch)	2012 - 2015
Honda Civic (Sedan)	2012 - 2015
Honda CRV	2012 - 2017

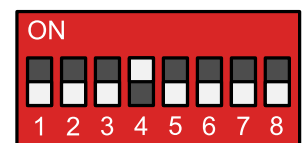


Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 

ASHO10C

Honda Jazz

2002 - 2008

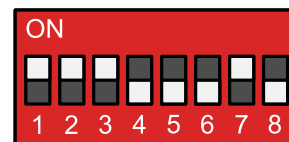

ASHO13C

Honda City


2014 - ON

Honda HRV (WO/Side Cam)

2017 - 2021

Honda Jazz

2014 - ON

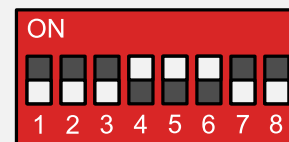


ASHO15C

Honda Civic (WO/Side Cam)

2012 - 2015

Honda CRV (WO/Side Cam)

2012 - 2017

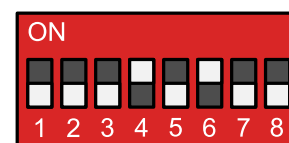

ASHO16C

Honda Civic (W/Side Cam)


2012 - 2015

Honda CRV (W/Side Cam)

2012 - 2017

Honda HRV (W/Side Cam)

2014 - 2016

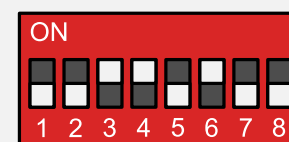

ASHO17C

Honda Civic (Hatch)


2012 - 2015

Honda Civic (Sedan)

2014 - 2015

Honda CRV



2014 - 2017

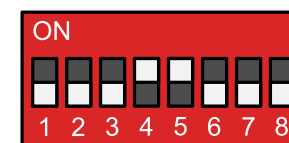


ASHO18C

Honda Odyssey

2014 - 2020

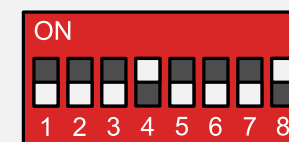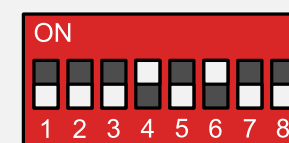

Gear R change to D, no front view

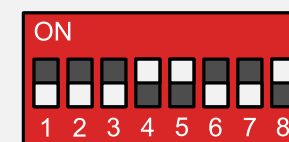

Gear R change to D, front view will gone when drive.


ASHO22C

Honda Civic (WO/Side Cam)

2015 - ON

Honda CRV (WO/Side Cam)

2017 - ON

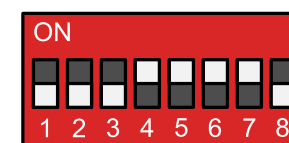


ASHO23C

Honda Civic (W/Side Cam)

2017 - ON

Honda CRV (W/Side Cam)


2017 - ON

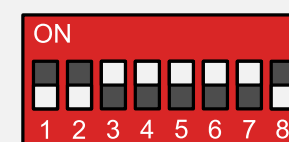

Stereo Dipswitch Settings

Prior to installation, configure the four DIP switches for your specific stereo brand as shown below. Please disconnect the module before setting up the DIP switch.

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 

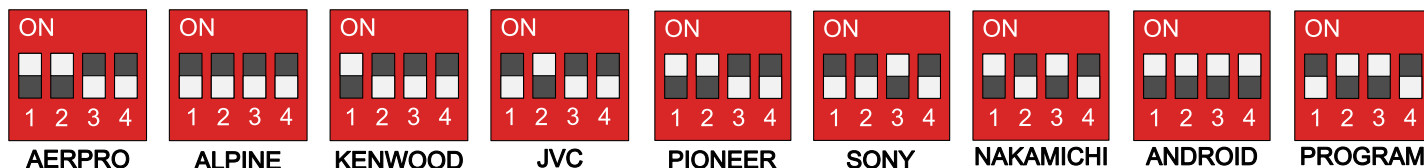

Steering Wheel Control Setup

CONNECTION OPTIONS:


Option A: (Both 8-Pin Connector & 3.5mm Jack) Aerpro AM905D, AM1005D & Pioneer DMH-AP6650BT it is recommended that both the 8-Pin connector and 3.5mm jack are connected.

Option B: (3.5mm Jack): Connect the 3.5mm jack to the female SWC jack input from headunit.

Option C: (Wired Leads): For units without a direct plug-in connect SWC Key 1, some instances will require SWC Key 2, and SWC GND also.

Option D: (8-Pin Connector): Connect the 8-pin plug to the SWC input only for Nakamichi, Android Headunits & Alpine INE-AW409S, INE-AX809

IMPORTANT NOTE: Unless otherwise stated most headunits only require one connection for SWC retention.

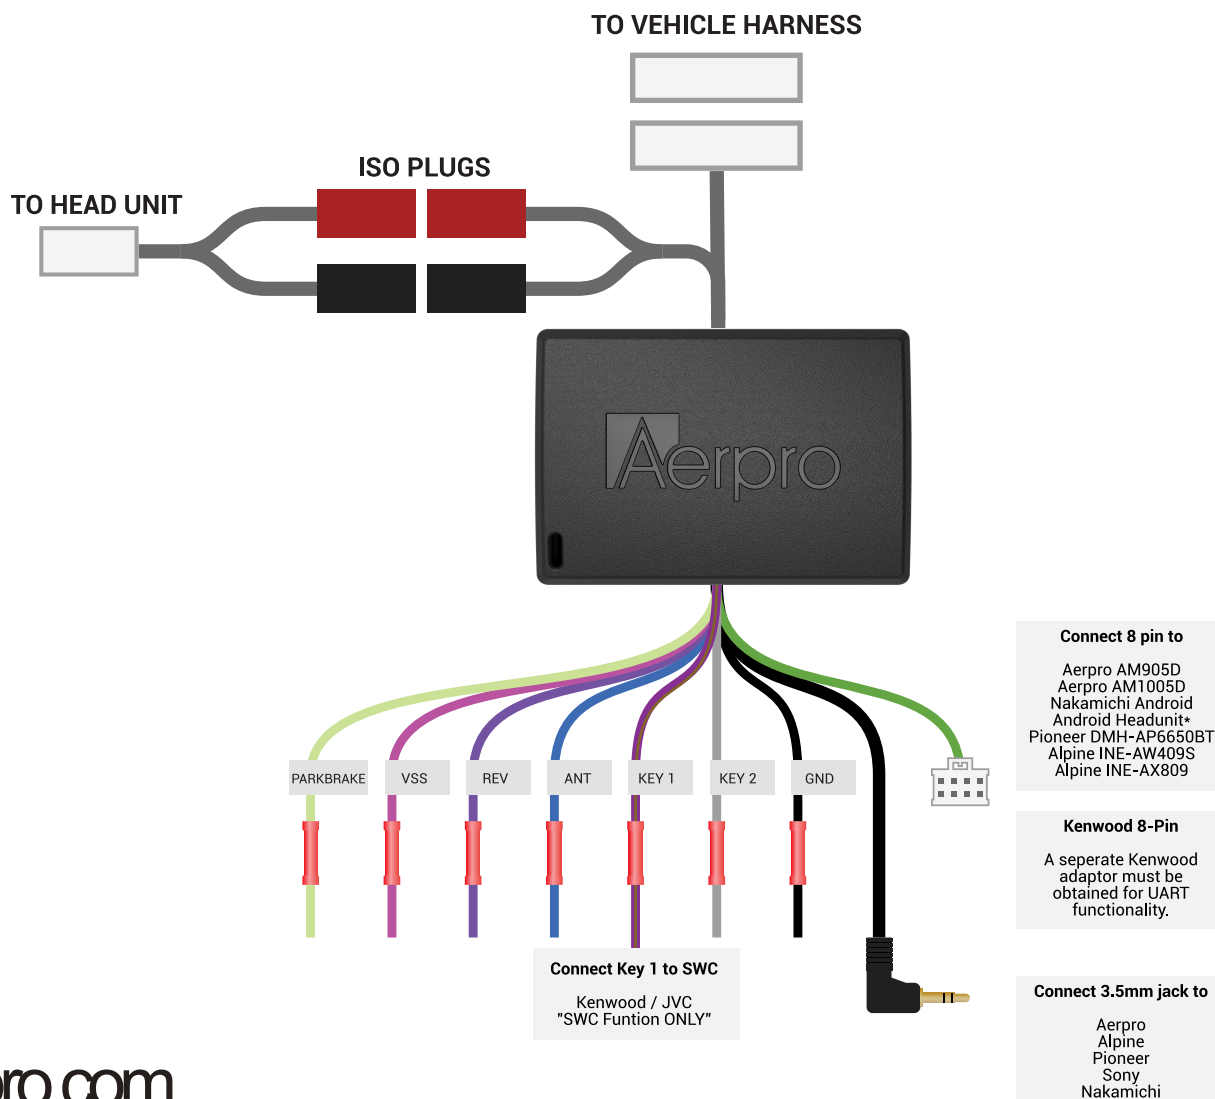

Steering Wheel Control Configuration

Aerpro: AM905D, AM1005D

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Alpine: Operate directly.

JVC: Operate directly.

Kenwood: Operate directly.

Nakamichi: Presets: NA3615 (W7, W9, WX, M9, MX), NA3510-M7, NA3625 (W6, WUX).

Pioneer: Settings → Steering Wheel Control → With Adapter.

Pioneer DMH-AP6650BT: (Two setup methods)

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Sony: Settings → General → Steering Control → Preset.

If Preset does not work use Custom: If preset fails, set DIP to 1-OFF, 2-ON, 3-ON, 4-OFF.

Android Headunit: (Inc. Alpine INE-AW409S, AX809; Nakamichi Android)

Connect 8-pin (CANBUS) or Key 1, Key 2, GND.

With CANBUS: DIP Switch to Android → Factory Settings.

- Alpine: Password 1967.
- Nakamichi: Password 1948 → Select Hiworld as provider → Choose vehicle type.

Without CANBUS: DIP Switch to Program → Select SWC Learning in stereo menu.

Factory 3 Angle Rearview Camera Setting & Control (If applicable)

When the vehicle is in Reverse mode, press and hold the **BT hang-up** button on the steering wheel to switch the factory 3 angle rearview.

Factory 360° Camera Setting & Control (If applicable)

When the vehicle is in factory 360° camera mode, press the **NEXT** button on the steering wheel to switch the factory 360° camera mode.

Press the **PREVIOUS** button to exit.

Time Setting (On the Vehicle Dashboard Screen) (If applicable)

For some Honda models, the time can be set through the car's settings menu, not from the headunit.

Press and hold the **PREVIOUS** button for 15 seconds until the time on the dashboard changes to 12:30 to enter the settings mode.

To change the hour, press the **PREVIOUS** button.

To change the minutes, press the **NEXT** button.

After setting the time, wait 15 seconds for the changes to save automatically.

Technical Support

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia
TEL: 03 8587 8889 MON-FRI 9AM – 5PM AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the <http://aerpro.com> website.