
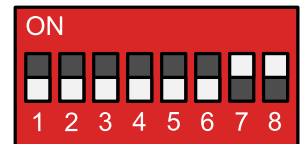


Steering Wheel Control Interface To Suit Mazda

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 

ASMZ4C	Mazda 2	2014 - ON
	Mazda 3	2009-2013
	Mazda 3	2013 - ON
	Mazda 6	2008 - 2013
	Mazda CX-3	2014 - ON
	Mazda CX-5	2012 - 2014
	Mazda MX-5	2009 - 2013
	Mazda RX-8	2008 - 2010
	Mazda CX-9	2011 - 2015

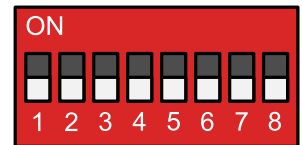


ASMZ7C	Mazda 2	2014 - ON
	Mazda 3	2013 - ON
	Mazda CX-3	2014 - ON
	Mazda CX-5	2015 - 2017



ASMZ7C supports Mazda central control functions, including Volume Up, Volume Down, Backward, Forward, Mode, and Mute buttons. The Home, Nav, and Back buttons all operate the same as the MODE button.

ASFO7C	Mazda BT-50	2012 - 2018
	Mazda BT-50 Apline 7"	2018 - 2019

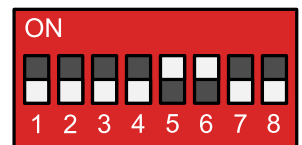


ASMZ12C	Mazda 2	2003 - 2014
	Mazda 3 NON BOSE AMP	2004 - 2009
	Mazda CX-7	2006 - 2012
	Mazda CX-9	2007 - 2011



ASMZ14C	Mazda BT-50	2015 - 2017
	Mazda BT-50 Apline 8"	2018 - 2019




ASIZ4C	Mazda BT-50	2020 - ON
---------------	-------------	-----------

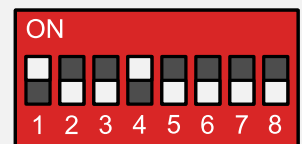

Stereo Dipswitch Settings

Prior to installation, configure the four DIP switches for your specific stereo brand as shown below. Please disconnect the module before setting up the DIP switch.

Please disconnect the module before setting up the DIP switch. DIP SWITCH - ON  OFF 

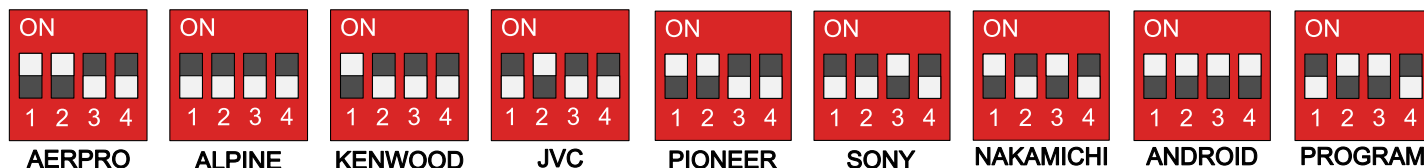

Steering Wheel Control Setup

CONNECTION OPTIONS:


Option A: (Both 8-Pin Connector & 3.5mm Jack) Aerpro AM905D, AM1005D & Pioneer DMH-AP6650BT it is recommended that both the 8-Pin connector and 3.5mm jack are connected.

Option B: (3.5mm Jack): Connect the 3.5mm jack to the female SWC jack input from headunit.

Option C: (Wired Leads): For units without a direct plug-in connect SWC Key 1, some instances will require SWC Key 2, and SWC GND also.

Option D: (8-Pin Connector): Connect the 8-pin plug to the SWC input only for Nakamichi, Android Headunits & Alpine INE-AW409S, INE-AX809

IMPORTANT NOTE: Unless otherwise stated most headunits only require one connection for SWC retention.

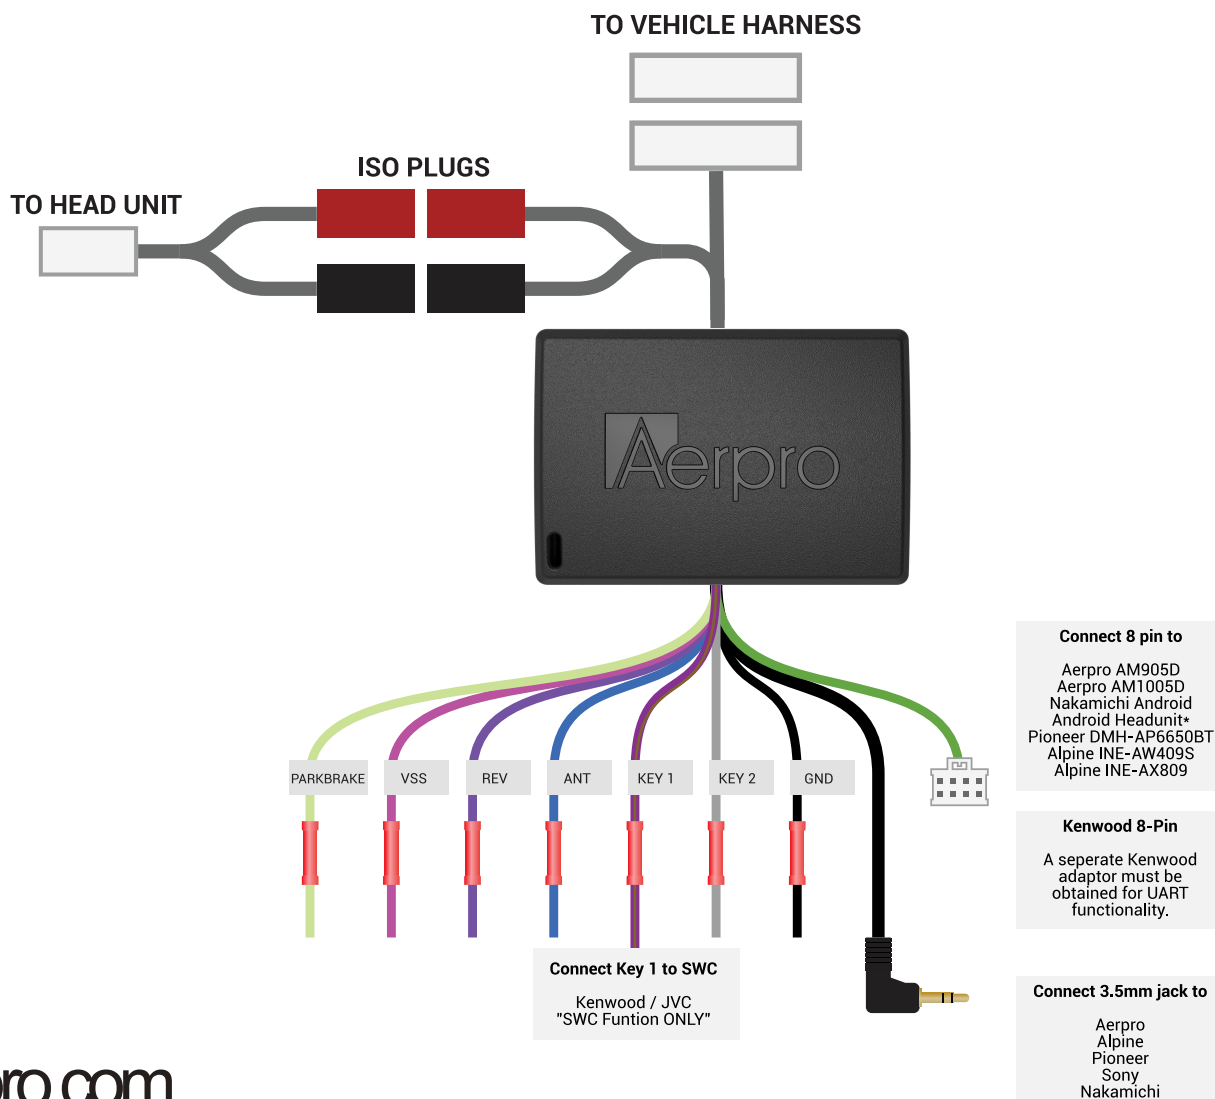

Steering Wheel Control Configuration

Aerpro: AM905D, AM1005D

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Alpine: Operate directly.

JVC: Operate directly.

Kenwood: Operate directly.

Nakamichi: Presets: NA3615 (W7, W9, WX, M9, MX), NA3510-M7, NA3625 (W6, WUX).

Pioneer: Settings → Steering Wheel Control → With Adapter.

Pioneer DMH-AP6650BT: (Two setup methods)

1. 3.5mm Jack: DIP switches: 1-ON, 2-ON, 3-OFF, 4-OFF. Go to Settings → Steering Wheel Control → With Adapter.
2. 8-pin Adapter: Reset unit → Select Hiworld → Select vehicle type → Program SWC according to screen. (Displays factory info; check Pioneer website for compatibility).

Sony: Settings → General → Steering Control → Preset.

If Preset does not work use Custom: If preset fails, set DIP to 1-OFF, 2-ON, 3-ON, 4-OFF.

Android Headunit: (Inc. Alpine INE-AW409S, AX809; Nakamichi Android)

Connect 8-pin (CANBUS) or Key 1, Key 2, GND.

With CANBUS: DIP Switch to Android → Factory Settings.

- Alpine: Password 1967.
- Nakamichi: Password 1948 → Select Hiworld as provider → Choose vehicle type.

Without CANBUS: DIP Switch to Program → Select SWC Learning in stereo menu.

Time & Amp Setting (If applicable)

1. Enter Setup Mode

Press and hold the MODE / Pick-Up button on the steering wheel for 15 seconds to enter Setup Mode.

This mode allows adjustment of the clock (time) and factory amplifier output level.

2. Adjust Time

Use the Previous and Next buttons on the steering wheel to change the time settings.

3. Adjust Amplifier Output

Use the Volume Up and Volume Down buttons to increase or decrease the factory amplifier output level.

4. Exit Setup Mode

The system will automatically exit Setup Mode after 20 seconds of inactivity.

Technical Support

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia
TEL: 03 8587 8889 MON-FRI 9AM – 5PM AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the <http://aerpro.com> website.